


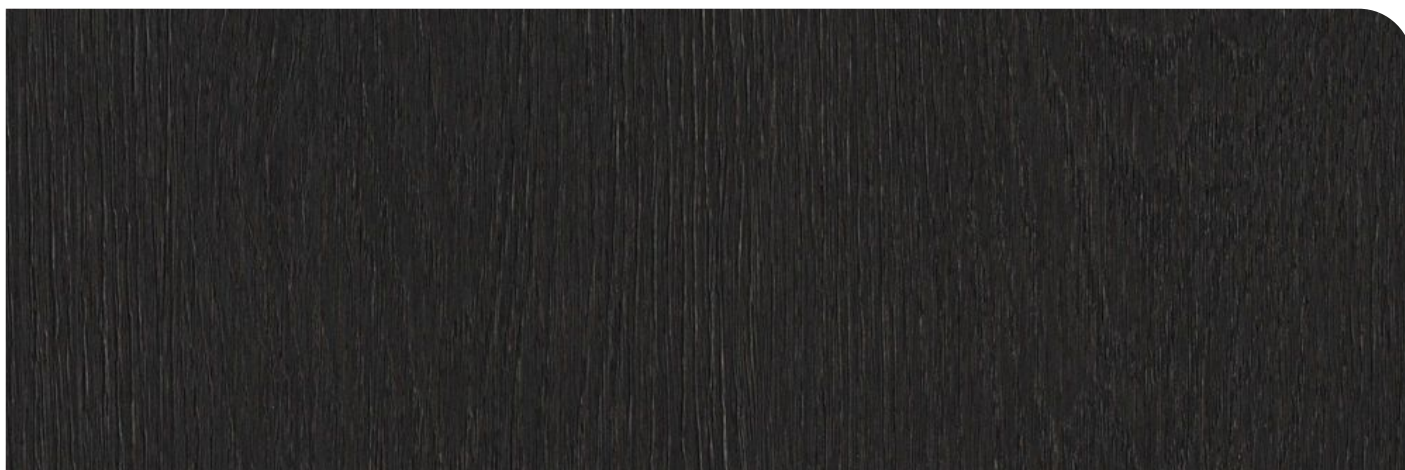

RANGE & FINISH

FAMILY	Wood	SUB-FAMILY	Dark
FINISHES	Prestige	SURFACE EFFECT	Matt

SAMPLES AVAILABLE

A5 SAMPLES

PREMIUM SAMPLES

CHARACTERISTICS

Width	122 cm
Length	50 m
Thickness	250 µm
Item weight	250 - 360 g/m²
Composition	PVC
Type of Adhesive	Acrylic PSA with air release system
Warranty	10 years
Storage Temperature	5°C-30°C
Storage in recommended conditions	3 years
Pattern Direction	Length
Wood Structure	Knots & Timber

PERFORMANCES

Scratch resistance	Average
Stains resistance	Passed
Thermal Resistance	Passed
Water and Moisture resistance	Passed
Color Fastness to light	Passed
Adhesion	Passed
Antibacterial properties	Passed
Dimensional stability	0.25 mm
Washability	Passed

CERTIFICATIONS

CE (CPR 305/2011)
Compliant

REACH / ROHS
Compliant

FIRE RATING (EN13501-1)
C-s2,d0

VOLATILE ORGANIC COMPOUNDS
(EN16516) - A+
Compliant

RESTRICTED SUBSTANCES
Compliant

IMO/MED MODUL B - E
Compliant

RAIL (EN45545-2, R1)
Compliant

EPD AVAILABLE
Available

APPLICATION, INSTALLATION & MAINTAINANCE

APPLICATION COMPATIBILITY

Stretchable	Yes
Suitable for	Interior
Direct Water contact areas	Yes
Pattern continuity across panels	Yes, with care
Imperfect surfaces	Yes, with care
High contact wear surfaces	Yes, with care

INSTALLATION

Installation Type	Interior
Installation Method	Dry
Installation Temperature	12°C-38°C
Installation Method (ABBA - ABAB)	ABBA

INSTALLATION GUIDELINES


- Install Cover Styl® film in a clean, dry and dust-free environment, with ambient and substrate temperatures between 12°C and 38°C. The substrate must be smooth, stable, clean, dry and free from dust, grease, silicone, wax and other contaminants.
- Repair surface defects and always perform an adhesion test, especially on unknown or treated substrates. Porous or absorbent surfaces may require specific preparation and a full-surface primer.
- Apply the film dry with a suitable felt squeegee, working progressively to remove air and ensure even adhesion.
- Use heat to conform the film around curves and complex shapes, while avoiding excessive stretching or overheating.
- Before installing multiple sheets, check the film direction, pattern repeat and the correct joint or overlap method.
- Use sharp blades without damaging the substrate. After installation, check the edges, joints and overall finish. Refer to the latest Cover Styl Technical Manual for substrate preparation, primer selection and installation techniques.

MAINTENANCE GUIDELINES

For daily care, use a mild soap or pH-neutral detergent to clean the film's surface. Avoid using products with extremely acidic or basic pH levels, as they can harm the material. When cleaning the film surface, only use soft cloths or sponges to prevent any damage.

For stubborn stains, apply hot water (not boiling) to the affected area. If necessary, use a cleaning solution composed of 70% isopropyl alcohol and 30% water, applied with a melamine sponge.

For sanitizing, use only isopropyl alcohol-based products like Isopropyl Alcohol Wipes (not for daily use). Avoid organic-based cleaners like ammonia or polish, as they can damage vinyl. Test any cleaning detergents, bactericides, or virucidal products on a hidden area first to ensure compatibility.

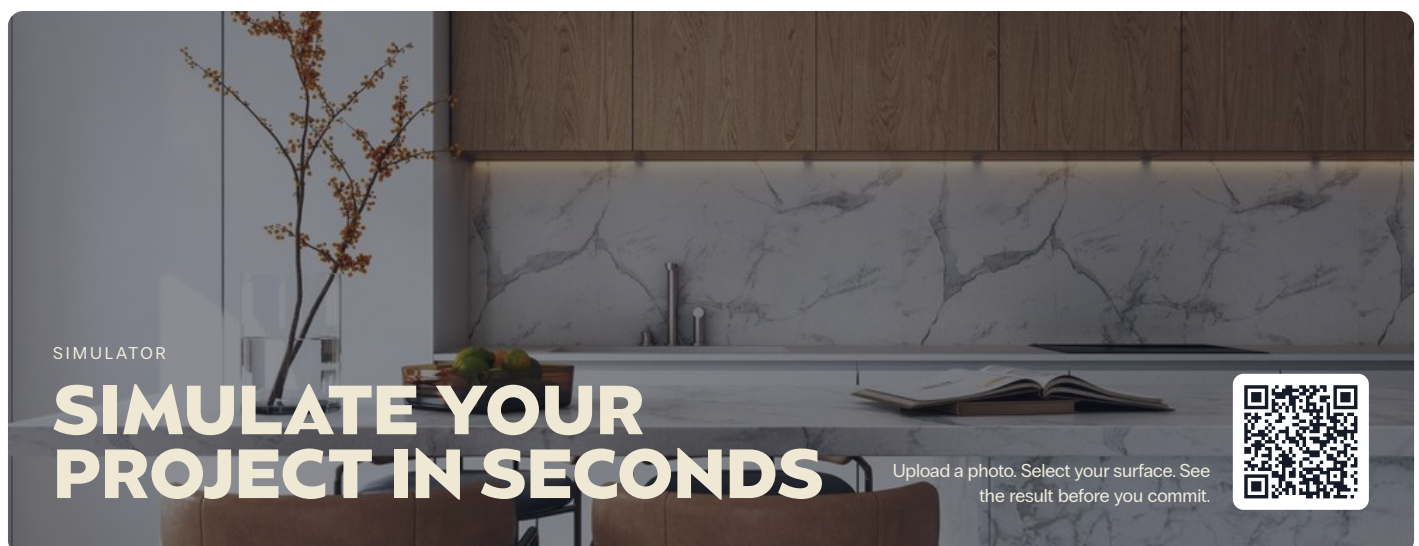

SIMULATOR

SIMULATE YOUR PROJECT IN SECONDS

Upload a photo. Select your surface. See the result before you commit.

